

English GuidePart Names


• The numbers shown in the symbols are the page numbers where part functions and/or use are explained in Japanese.




Front View

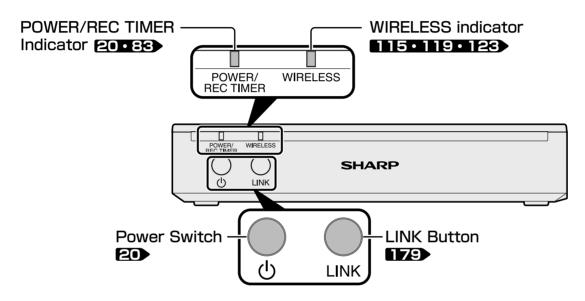

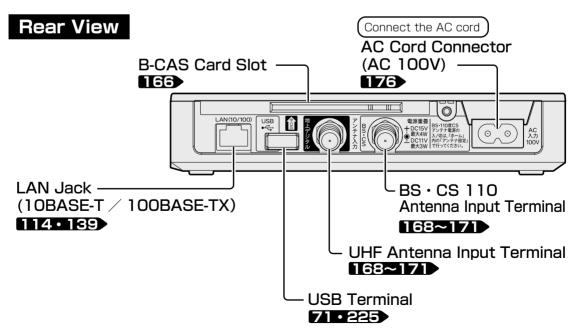




The illustrations below are those of LC-40F5. LC-52F5, LC-46F5, LC-32F5 has the same layout of jacks and terminals as LC-40F5.

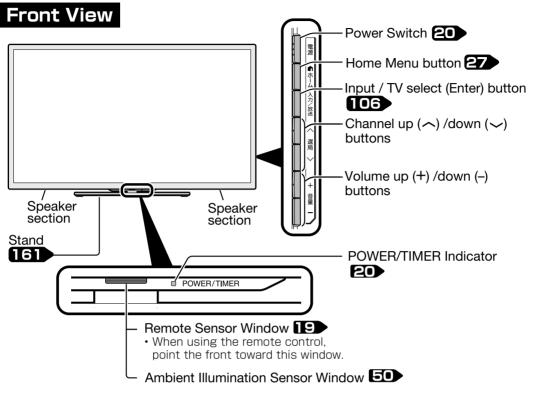

Rear View

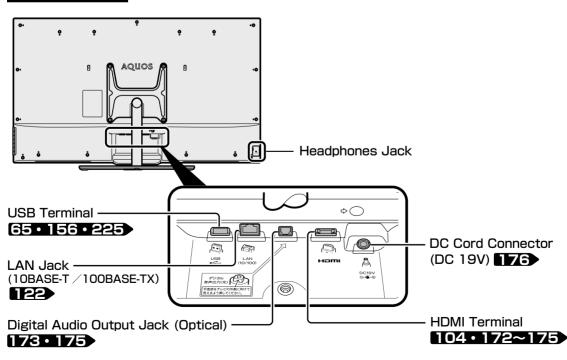

Remote Control Unit Active/Standby 20 Press to turn on the TV set in active or standby mode. Channel Up(∧)/ Volume Up(+)/ Down(V) 電源 Down(-) **28** · Press to select channels Press to adjust the volume. in ascending or descending order. My Circle 24 選局 **%CATV** channels are · Press to display factory set to be skipped. "My Circle". Enter/Confirm マイサークル Press to confirm a Display the selected setting or Tool Menu 27 menu item. Display the "Home" Cursor (up. down, left, right)/ Menu 27 決定 Jog Dial Section - Press to start some See the below. useful TV functions. 嵇 Finish -Return · Press to finish a Press to go back to 番組表 データ menu operation. the previous screen. (d)etc. Linked Data Broadcast RID Press to show the data broadcast linked with Number Kev AQUOS the current digital TV Button (39) program. Press to display SHARP the number key panel EPG ET when inputing number. Press to display or turn off the Electronic Color Buttons -Program Guide Use to operate EPGs and data program screens. (EPG: 番組表) when receiving a digital broadcast.

Cursor and Jog Dial Section



Cursor (up, down, left, right)

• Use to select a menu item, column, etc.



Jog Dial

- · Turn to use.
- Can be used for "My Circle", program selection, etc.

24 • 28 • 37

• Can be used in place of the cursor in some cases.

Switching the Display Language to English ホームメニューなどの言語を英語にする

 Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

市ホ-



Select"設定"(Setup) on


ホームメニューから「設定」

設定

Select with

Press

決定





with


Press

決定

「English」を選ぶ Select

Select "English".

Enter.






- · The menu screen is now displayed in English.
- ・画面表示が英語になります。

Finish this operation. 終了する

Press



チャンネル

the Home menu.

Select with

Press

and select

with

(View Setting). 「丿(視聴準備)|を選ぶ

を選ぶ



with



Press



誤ってホームメニューを英語にしてしまったと きは

ホームメニューから「Setup」 − 「* (View Setting)」 - 「言語 (Language)」を選ん で決定し、「日本語」を選んで決定すると日 本語になります。